


# Check Synchronising Relay

4921240263F

Type CSQ-3

- **Multifunction precision LED synchronoscope**
- **Easy push-button programming of all set points**
- **Very high user safety**
- **High immunity to harmonic distortion**
- **Dead-bus functionality**
- **Version for marine applications**

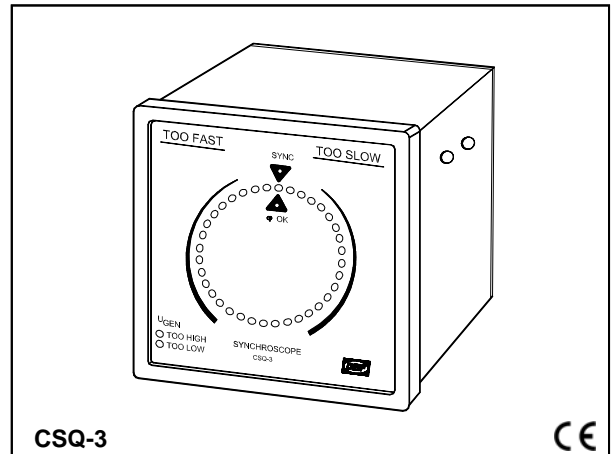

## Application

The CSQ-3 is a microprocessor based synchronising unit. It can be used in any kind of installation where manual or semi-automatic synchronising is required.

## Versions

Two versions optimised for land or marine applications exist.

## Measuring principle

The unit measures the busbar ( $U_{BUSBAR}$ ) and generator ( $U_{GEN}$ ) voltages and frequencies and compares these, plus compares the phase angle relationship.

## Settings

The unit is equipped with several user settings, hidden under the front foil. This placement gives a high degree of user safety because no hazardous voltages are present, i.e. the unit can be programmed while running without the risk of electric shock or damage to installations.

## Phase window, $\Delta\phi$

Here the phase window for synchronisation is chosen. It can be set both symmetrically and asymmetrically.

## Voltage difference, $\Delta U$

Here the allowed voltage difference between  $U_{GEN}$  and  $U_{BUSBAR}$  is set. It can be set both symmetrically and asymmetrically. Measurement is done relatively to  $U_{BUSBAR}$ .

## Length of SYNC pulse, $T_R$

Determines the length of the SYNC pulse (SYNC relay activating time). This value must be matched to the time characteristic of the circuit breaker.

## SYNC relay delay, $T_d$

Determines the time  $U_{GEN}$  and  $U_{BUSBAR}$  have to be within the phase window before the SYNC relay is activated. This parameter can only be adjusted when  $T_R = \infty$  is selected.

## Dead-bus function/offset voltage, $T_R$

The allowed noise level voltage on  $U_{BUSBAR}$  can be set to determine dead-bus mode. It is measured relatively to  $U_{GEN}$ .

## Factory settings

All the above mentioned settings are preset from the factory. At any time these factory defaults can be re-stored.

## Sealing of settings

If necessary the settings can be sealed when the wanted functionality is obtained. This is very easy because of the placement under the front foil/cover.

## Operation

The rotation of the red LED circle indicates the frequency difference. The faster the rotation, the larger the frequency difference. One rotation per second equals 1Hz difference. The position of the lit red LED indicates the phase difference between  $U_{GEN}$  and  $U_{BUSBAR}$ . The circle represents a degree-

scale from 0-360 degrees with zero degree at the 12 o'clock position. With 36 LEDs the resolution on the reading is 10 degrees.

If the frequency difference between  $U_{GEN}$  and  $U_{BUSBAR}$  is higher than 3Hz, the rotation of the LED circle stops. If it stops with a lit red LED at "TOO SLOW", the frequency of the  $U_{GEN}$  is lower than  $U_{BUSBAR}$ . If it stops with a lit red LED at "TOO FAST", the frequency of the  $U_{GEN}$  is higher than  $U_{BUSBAR}$ .

When the phase angle between  $U_{GEN}$  and  $U_{BUSBAR}$  is within the preset  $\Delta\phi$  window, then the yellow LED " $\Delta\phi$  OK" will be lit.

If the voltage difference between  $U_{GEN}$  and  $U_{BUSBAR}$  is outside the preset  $\Delta U$  range, one of the two red LEDs will be lit and the SYNC relay cannot be activated. If the voltage on  $U_{GEN}$  is higher than  $U_{BUSBAR}$ , LED " $U_{GEN}$  TOO HIGH" will be lit. If the voltage on  $U_{GEN}$  is lower than  $U_{BUSBAR}$ , LED " $U_{GEN}$  TOO LOW" will be lit.

If both the " $U_{GEN}$  TOO LOW" and " $U_{GEN}$  TOO HIGH" LEDs are lit simultaneously, it indicates an overvoltage error at the input.

## Normal synchronising

The unit automatically calculates the synchronising parameters to check if there is the required space for the synchronising signal inside the preset phase window. These calculations compare the frequency difference with  $T_R$  and the size of the phase window. When  $T_R$  is set to  $\infty$ ,  $T_d$  can be set by the user and is included in the calculations.

If the  $\Delta\phi$  window is set symmetrically, both underfrequency synchronising and overfrequency synchronising is possible.

## Under- or overfrequency synchronising

When the  $\Delta\phi$  window is set asymmetrically, the following functionality is possible:

If the  $\Delta\phi$  window is set asymmetrically with a lower positive than negative  $\Delta\phi$  value, only synchronising with the generator input at higher frequency than the busbar input is possible (positive slip frequency).

If the  $\Delta\phi$  window is set asymmetrically with a higher positive than negative  $\Delta\phi$  value, only synchronising with the generator input at lower frequency than the busbar input is possible (negative slip frequency).

## Dead-bus function

When activated, the dead-bus function enables the SYNC relay to be activated, when no busbar voltage is present (i.e. during a power failure). When the generator voltage is within 80% of nominal level and the busbar voltage is under the preset busbar offset level, the SYNC relay will be activated, regardless of all other parameters. When the voltage on the net has been restored, the CSQ-3 will remain in the dead bus function for a period of 5 seconds.

*Therefore, be careful when using this feature!*

## Type CSQ-3

### Technical specifications

|   |   |
|---|---|
| <b>Accuracy:</b>                                    | ±2 electrical degrees   |
| <b>Resolution:</b>                                  | 10 electrical degrees   |
| <b>Max. freq. difference:</b>                       | No limit  |
| <b>Frequency range:</b>                             | 40...70Hz (supply)  |
| <b>SYNC output:</b>                                 | 1 SPST-NO-contact   |
| Relay contact ratings:<br>(Gold plate silver alloy) | AC1: 8A, 250V AC<br>DC1: 8A, 24V DC<br>AC15: 3A, 250V AC<br>DC13: 3A, 24V DC  |
| <b>Mechanical life:</b>                             | 2 x 10 <sup>7</sup>   |
| <b>Electrical life:</b>                             | 1 x 10 <sup>5</sup> (nominal value)   |
| <b>Optocoupler output:</b>                          | (Only on marine version)<br>System status off = failure<br>2 wires AWG 20 (red/black)<br>30 mm length<br>Max. 40V, 10mA   |
| <b>Temperature:</b>                                 | -25...70°C (operating)  |
| <b>Temperature drift:</b>                           | Set points:<br>Max. ±0.2% of full scale per 10°C  |
| <b>Shock test:</b>                                  | 15g – 6 times – 3 directions<br>50g/6ms<br>22g/20ms   |
| <b>Galvanic separation:</b>                         | Between inputs, output and ground:<br>3750V - 50Hz - 1 min  |
| <b>Input range (U<sub>N</sub>):</b>                 | 100...127V AC (115V AC) ±20%<br>220...240V AC (230V AC) ±20%<br>380...415V AC (415V AC) ±20%<br>440...480V AC (450V AC) +20%/-10%<br>(Above 450V AC: +10% only) |
| Busbar input:                                       | Load: 2kΩ/V   |
| Generator input:                                    | (Max. 2VA at nominal voltage)<br>Supply for the unit  |
| <b>Max. input voltage:</b>                          | 1.2 x U <sub>N</sub> , continuously<br>Above 450V: 1.1 x U <sub>N</sub> , continuously<br>2 x U <sub>N</sub> , for 10 sec.                                      |
| <b>Climate:</b>                                     | HSE, to DIN 40040   |
| <b>EMC:</b>   | CE marked according to EN 50081-1/2, EN 50082-1/2 and IEC 255-3   |
| <b>Safety:</b>                                      | To EN 61010-1. Installation cat. III, 600V. Pollution degree 2  |
| <b>Connections:</b>                                 | Max. 2.5 mm <sup>2</sup> (single-stranded)<br>Max. 1.5 mm <sup>2</sup> (multi-stranded)   |
| <b>Materials:</b>                                   | All plastic parts are self-extinguishing to UL94 (V0)   |
| <b>Protection:</b>                                  | Front: IP52. Terminals: IP20, to IEC 529 and EN 60529   |
| <b>Type approval:</b>                               | For current approvals see <a href="http://www.deif.com">www.deif.com</a> or contact DEIF A/S  |
| <b>UL listing:</b>                                  | On request, the instrument can be delivered according to UL listing: UL508, E230690   |

### Settings

| Setting of                                  | Range  |
|---|--|
| Δφ Phase difference                         | ±5...20° in 1° step or<br>±10...40° in 2° step |
| ΔU Voltage difference                       | ±1...10% in 1% step                            |
| T <sub>R</sub> Length of SYNC pulse         | 0...1 sec. in 0.1 sec. step or ∞               |
| T <sub>d</sub> SYNC relay delay             | 0...1 sec. in 0.1 sec. step                    |
| U <sub>OFFSET</sub> Dead-bus offset voltage | Off or<br>4 levels of noise suppression        |


### Indication

| LEDs  | Light  |
|---|--|
| SYNC  | Green, when the SYNC relay is activated                                      |
| Δφ OK   | Yellow, when inside the phase window   |
| TOO FAST  | Red LED stopped. Frequency difference too high. GEN too high                 |
| TOO SLOW  | Red LED stopped. Frequency difference too high. GEN too low                  |
| U <sub>G</sub> TOO LOW                            | Red, when outside the ΔU level   |
| U <sub>G</sub> TOO HIGH                           | Red, when outside the ΔU level   |
| U <sub>G</sub> TOO LOW<br>U <sub>G</sub> TOO HIGH | When both are red simultaneously, there is an overvoltage error on the input |

Once the relay has been mounted and adjusted, the front cover may be sealed, preventing unwanted change of the setting.

For more information about the product a User's manual (document no. 4189340263) is available on [www.deif.com](http://www.deif.com).


### Connections

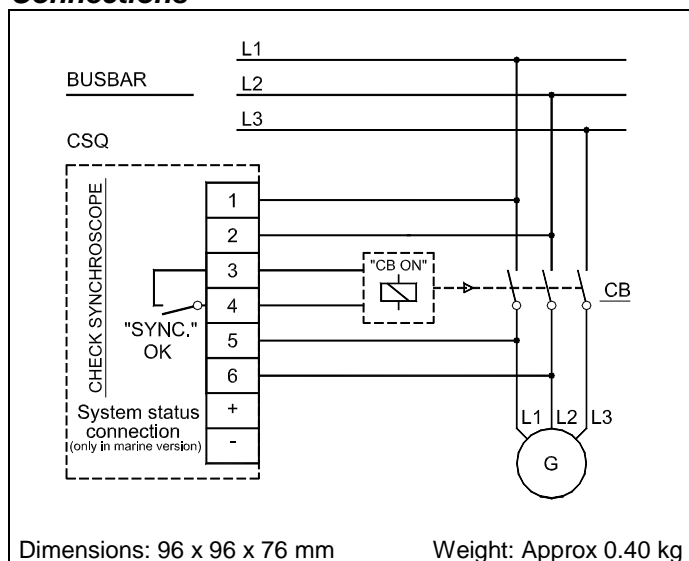

### Order specifications

| Type - Input voltage - Version |         |                |
|--------------------------------|---------|----------------|
| Example: CSQ-3                 | 230V AC | Land           |
| CSQ-3                          | 230V AC | Marine         |
| CSQ-3                          | 230V AC | Land UL listed |

Due to our continuous development we reserve the right to supply equipment which may vary from the described.



DEIF A/S, Frisenborgvej 33  
DK-7800 Skive, Denmark

Tel.: +45 9614 9614, Fax: +45 9614 9615  
E-mail: [deif@deif.com](mailto:deif@deif.com), URL: [www.deif.com](http://www.deif.com)

