Type: ELRM44V-3/2, V-10/2 & V-30/2 (0.5s) =

Earth Leakage Relay (Variable) - Type A

- 44mm (2.5 modules) wide DIN rail housing
 - 2 Relay outputs (S.O.) Standard Output operation (Relays energise on trip)
- 3 Models available (3A, 10A and 30A)
- Designed to monitor and detect true RMS earth fault currents (up to 30A) in conjunction with a separate toroid
- LED bargraph provides constant indication of any leakage current
- Microprocessor controlled with internal monitoring (self-checking)
- Adjustable Sensitivity (IΔn) and Time Delay (Δt) 0 (instantaneous)* to 0.5 seconds
- Separate "Test" and "Reset" push buttons


 Connection facility for remote "Test" and "Reset" push buttons or N.O. contacts
- Toroid open circuit detection forces unit to trip (Red LED flashes during this condition)
- LED indication of Supply status and fault condition after unit has tripped





to DIN 43880 W. 44mm

• FUNCTION DIAGRAM

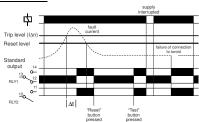

• INSTALLATION



Installation work must be carried out by qualified personnel.

- BEFORE INSTALLATION, ISOLATE THE SUPPLY.
- Connect the unit as shown in the diagram below (N.B. certain features may not be required and therefore do not need
- Apply power, the green "supply on" LED will illuminate and the relays will remain de-energised. The relays will
 - a, the fault current level exceeds the set trip level (I $\!\Delta n)$
 - b, there is a failure of the connection between the relay and the toroid (Note the red "tripped" LED will flash during this condition)
- Prior to a fault occurring, the LED bargraph will indicate the % of $I\Delta n$ being detected (the display is scaled between 25, 50, and 75% of the actual trip level). After all 3 LED's have illuminated and the unit trips due to an excessive fault current, the red "tripped" LED will illuminate. The unit will now remain in a latched condition.

- The unit can be placed into a fault condition by pressing the "Test" button on the front of the unit (or by pressing the remote "Test" button - if fitted). The output relays operate accordingly
- Press the "Reset" button on the front of the unit (or remotely if fitted) to reset the unit. The output relays revert back to their "non-tripped" state.
- The unit can also be reset by interrupting the power supply.
- To satisfy regulations, it is recommended that the device be tested periodically to ensure correct operation.

Troubleshooting

If the unit fails to operate correctly check that all wiring and connections are good.

The operating function of this unit is classed as a Type A for which tripping is ensured for residual sinusoidal our ents and residual pulsating direct currents, whether applied suddenly or slowly rising. Additionally, it is unit is against nuisance tripping Λ . This unit will also satisfy the requirements for **Type AC** devices which only need to detect residual alternating currents

This unit should be installed in conjunction with the latest wiring regulations and practices (IEE, etc).

• TECHNICAL SPECIFICATION

Please state Supply voltage

Supply voltage Un (5, 6, 7): (see connection diagram) All AC supplies are galvanically is

12 - 125V DC (85 - 110% of U) 24, 115/230, 400V AC (85 - 115% of Un) oblited between Supply and Toroid and remote test/reset connections 50/60/400Hz (AC supplies)

Over voltage cat. III 800V (24V AC supplies), 2.5kV (115V AC supplies)

(1.2 / 50uS) IEC 60664

BOUV (24Y M.Supplies) A. SkY (113Y M.Supplies)
4kY (230Y, 400V AC supplies)
6VA (AC supplies) 5W (DC supplies)
Up to 30A (15 - 400Hz) (through external toroid with 1000:1 ratio
and connected to terminals 8 and 9) Monitored leakage current:

Sensitivity IΔn (see Accessories also)

ELRM44V-3/2 30, 50, 100, 200, 300, 500, 750mA, 1, 2, 3A (user selectable)

ELRM44V-10/2 30, 100, 300, 500, 750mA, 1, 3, 5, 7.5, 10A (user selectable)

ELRM44V-30/2 30, 100, 300, 500mA, 1, 3, 5, 10, 20, 30A (user selectable)

80 - 90% of IΔn

Trip level limits: Reset Value:

80 - 90% of IΔn = 85% of tripped level 0*, 60, 100, 150, 200, 250, 300, 400, 500mS (user selectable) Time delay Δt:

ntaneous" is <25mS when fault current @ 5 x lΔn.

Green x 3 (25, 50 and 75% of actual trip level)
Red (see "INSTALLATION" to the left)

Memory: storage of the leakage fault and reset with the "Reset" push button -20 to +55°C (-5 to +40°C in accordance with IEC 60755)

Relative humidity +95%

+7370 IX SPNO, IX SPDT relays RLY I (12, 13, 14) RLY 2 (10, 11) ACI (250V) BA (2000VA) 6A (1500VA) ACI5 (250V) 2.5A 4A DCI (25V) BA (200VV) 6A (150W)

 Output rating:
 RLY 1 (12, 4000 Mg)

 AC 1 (250V)
 8A (2000 Mg)

 AC 15 (250V)
 2.5A

 DCI (25V)
 8A (2000 Mg)

 Electrical life:
 > 150,000 ops at rated load

 Dielectric voltage:
 2kV AC (ms) IEC 60947-1

 Rated impulse withstand voltage:
 4kV (1.2 / 50µS) IEC 60664

Remote "Test" / "Reset" (1, 2, 3) Requires N.O. contacts. (i.e. push buttons) $> 80mS \ (Actual\ trigger\ time = 80mS + \Delta t\ setting\ for\ remote\ "test")$

Grey flame retardant Lexan UL94 VO
= 190g (AC power supplies) = 110g (DC power supplies)
On to 35mm symmetric DIN rail to BS5584:1978

On to 35mm symmetric DIN rail to (EN50 002, DIN 46277-3) ≤ 2.5mm² stranded, ≤ 4mm² solid

Conforms to: IEC60755, 60947, 62020, 61543. IEC 61000-4-2, -3, -4, -5, -6, -12 and -16. CISPR 22.

CE and Compliant.

Above refer to terminal numbers on the relay housing.


Options

 $I. \ \ For other supply voltages, alternative trip levels or time delays, please consult the sales of fice$

Accessories - Toroids

Toroid	Internal	I∆n (min.)	Toroid	Internal	IΔn (min.)
Type:	diameter:	Α	Type:	diameter:	Α
BZCT035	35mm Ø	0.03	BZCT120	120mm Ø	0.1
BZCT050	50mm Ø	0.03	BZCT160	160mm Ø	0.1
BZCT070	70mm Ø	0.03	BZCT210	210mm Ø	0.3

• SETTINGS • CONNECTION DIAGRAM ces >1m, use twisted between the unit and $\otimes \otimes \otimes \otimes \otimes \otimes \otimes$ Toroid 50m* max. Time delay adjustment (Δt) in Seconds Green "Power On" (LED indication Green "Leakage Current" LED indication (% x Δn) Red "Tripped" (LED indication "RESET" button ^ Dual voltage only available as 115/230V AC. For 115V AC, connect across 6 and 7. For 230V AC (and other voltages), connect across 5 and 7.

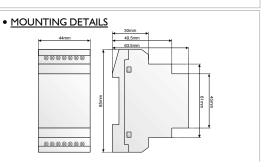

CARREL-ELECTRADE LIMITED

Auckland Tel: 09-525 1753 Fax: 09-525 1756 Christchurch Tel: 03-366 1242 Fax: 03-379 1991

Email: sales@carrel-electrade.co.nz Web: www.carrel-electrade.co.nz